



The Autopuller

By CLAY DELAY

Model APHC-B

Owner's Manual



CLAY DELAY
115 Roycroft Dr. West Seneca NY 14224
Phone 716-674-4489 E-mail: autopullers@claydelay.com
www.claydelay.com

CLAY DELAY
115 Roycroft Dr. West Seneca NY 14224
Phone 716-674-4489 E-mail: autopullers@claydelay.com
www.claydelay.com

Model APHC is a handheld target machine release with a counter.

Operation is simple:

Turn on using the top rocker switch

Press the button that corresponds to your desired target and the target is released. The counter will advance one count for a single and two counts for a double.

Holding the button down will not give multiple targets. You must press the button for each target launch you want.

Machine signal adjustment:

If you have a slower cycling machine, you may have to increase the machine signal length.

To adjust:

1. Press, and while holding the right button, turn on. Release button.
2. Using the reset box, reset the counter back to 0. Wait for the display to advance to the present value.
3. Reset the counter again.
4. Press and release the right button until the new desired value is displayed.
5. Press and hold the center button to store the value. The display will go back to 0 once value is stored.
6. The new machine signal length will now be used.

The base time is .4 second machine signal. Each count on the display will add .1 seconds. A count of 10 will give a signal of 1 second. A count of 15 will give a signal of 1.5 seconds. Then max time is 3 seconds, a count of 30.

If the new time is too long, or still too short, repeat the procedure. Keep in mind that each time you start, the timer resets to 0. (If you select less than 4, your unit will automatically set the time to 4.)

Resetting the counter:

1. Unplug the Autopuller from the course before resetting.
2. Plug the reset box cable in the side jack.
3. Turn the Autopuller on.
4. Press and hold the reset button on the top of the reset box until the counter resets.
5. Turn off the Autopuller
6. Unplug the reset box.

